



**I : Inspection L : Lubrication R : Replace or change ● : Applicable None : Not applicable**

| Items                                                                                      |                  |           | Service Intervals (Odometer reading or months, whichever occurs first) |    |                                       |    |    |    |     |     |     |     |     |     |     |     |  |  |
|--------------------------------------------------------------------------------------------|------------------|-----------|------------------------------------------------------------------------|----|---------------------------------------|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|--|--|
|                                                                                            | Months           |           | 12                                                                     | 24 | 36                                    | 48 | 60 | 72 | 84  | 96  | 108 | 120 | 132 | 144 | 156 | 168 |  |  |
|                                                                                            | Odometer Reading | × 1000 km | 15                                                                     | 30 | 45                                    | 60 | 75 | 90 | 105 | 120 | 135 | 150 | 165 | 180 | 195 | 210 |  |  |
| <b>OPERATIONS INSIDE THE VEHICLE</b>                                                       |                  |           |                                                                        |    |                                       |    |    |    |     |     |     |     |     |     |     |     |  |  |
| Check brake pedal for free play                                                            |                  |           | I                                                                      | I  | I                                     | I  | I  | I  | I   | I   | I   | I   | I   | I   | I   | I   |  |  |
| Check parking brake lever stroke and play                                                  |                  |           | I                                                                      | I  | I                                     | I  | I  | I  | I   | I   | I   | I   | I   | I   | I   | I   |  |  |
| Replace air purifier filter                                                                |                  |           | Normal usage                                                           |    | R                                     | R  | R  | R  | R   | R   | R   | R   | R   | R   | R   |     |  |  |
| <b>OPERATIONS OUTSIDE THE VEHICLE</b>                                                      |                  |           |                                                                        |    |                                       |    |    |    |     |     |     |     |     |     |     |     |  |  |
| Check wheel alignment (Visual inspection for tyre wear)                                    |                  |           |                                                                        | I  |                                       | I  |    | I  |     | I   |     | I   |     | I   |     | I   |  |  |
| Check front and rear wheel bearings for play                                               |                  |           |                                                                        |    |                                       | I  |    |    |     |     | I   |     |     |     | I   |     |  |  |
| Check brake hoses and pipes for leakage                                                    |                  |           | I                                                                      | I  | I                                     | I  | I  | I  | I   | I   | I   | I   | I   | I   | I   | I   |  |  |
| Check brake pads and discs for wear                                                        |                  |           | Normal usage                                                           |    | I                                     | I  | I  | I  | I   | I   | I   | I   | I   | I   | I   |     |  |  |
|                                                                                            |                  |           | Severe usage                                                           |    | I : Every 7,500km or every 6 months   |    |    |    |     |     |     |     |     |     |     |     |  |  |
| Check brake shoe linings and drums (drum in disc) for wear                                 |                  |           | Normal usage                                                           |    |                                       | I  |    | I  |     | I   |     | I   |     | I   |     | I   |  |  |
|                                                                                            |                  |           | Severe usage                                                           |    | I                                     | I  | I  | I  | I   | I   | I   | I   | I   | I   | I   | I   |  |  |
| Check fuel hoses and pipes for leakage or deterioration                                    |                  |           |                                                                        | I  |                                       | I  |    | I  |     | I   |     | I   |     | I   |     | I   |  |  |
| <b>OPERATIONS AFTER ENGINE IS WARMED UP</b>                                                |                  |           |                                                                        |    |                                       |    |    |    |     |     |     |     |     |     |     |     |  |  |
| Check automatic transmission for fluid leakage (In case of leakage, check the fluid level) |                  |           | I                                                                      | I  | I                                     | I  | I  | I  | I   | I   | I   | I   | I   | I   | I   | I   |  |  |
| Replace automatic transmission fluid                                                       |                  |           | Normal usage                                                           |    | R : Every 195,000km                   |    |    |    |     |     |     |     |     |     |     |     |  |  |
|                                                                                            |                  |           | Severe usage                                                           |    | R : Every 90,000km                    |    |    |    |     |     |     |     |     |     |     |     |  |  |
| Replace engine oil (Refer to owners manual for oil specifications)                         |                  |           | Normal usage                                                           |    | R : Every 15,000km or every 12 months |    |    |    |     |     |     |     |     |     |     |     |  |  |
|                                                                                            |                  |           | Severe usage                                                           |    | R : Every 7,500km                     |    |    |    |     |     |     |     |     |     |     |     |  |  |
| Replace engine oil filter                                                                  |                  |           | Normal usage                                                           |    | R : Every 15,000km or every 12 months |    |    |    |     |     |     |     |     |     |     |     |  |  |
|                                                                                            |                  |           | Severe usage                                                           |    | R : Every 7,500km                     |    |    |    |     |     |     |     |     |     |     |     |  |  |
| Check engine idling speed                                                                  |                  |           | I                                                                      | I  | I                                     | I  | I  | I  | I   | I   | I   | I   | I   | I   | I   | I   |  |  |
| Check exhaust gas recirculation (EGR)                                                      |                  |           | I                                                                      | I  | I                                     | I  | I  | I  | I   | I   | I   | I   | I   | I   | I   | I   |  |  |
| <b>OTHERS</b>                                                                              |                  |           |                                                                        |    |                                       |    |    |    |     |     |     |     |     |     |     |     |  |  |
| Check body condition for damage                                                            |                  |           | I : Every year                                                         |    |                                       |    |    |    |     |     |     |     |     |     |     |     |  |  |
| Check the common rail diesel engine (small injection quantity learning)                    |                  |           | Diesel                                                                 |    | I                                     | I  | I  | I  | I   | I   | I   | I   | I   | I   | I   | I   |  |  |
| Road test                                                                                  |                  |           | I                                                                      | I  | I                                     | I  | I  | I  | I   | I   | I   | I   | I   | I   | I   | I   |  |  |

**NOTE:**

\*1 : If excessive noise is heard from the valve train at any time, please check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.

